USERGUIDE



SET-UP USERGUIDE
VM ECO SMART DISPLAY

vitrinemedia

Contents

1 Turn on the screen 3

2 Check the firmware version
(if you need to update, you need to be on a version higher than that of 29/12/2023) 7

3 Connect the screen to the Wi-Fi network : 10

4 Setting the date and time 14

5 Check whether the Brightness menu is activated : 16

6 Changing the screen orientation : 17

1 Turn on the screen

- Check that the batteries are in the remote control. (2 x LR03)
- Check the electrical connections, network & infrared sensor and screen brightness.
- Press the red button at the top left of the remote control

VM ESD screen - Change the screen language

GENERAL INFORMATION


You can change the screen language in the screen's Android settings. By default the screens are in English but you can change it to any existing language.

HOW DO I DO THIS?




Using the remote control, press the "back" arrow to mute the broadcast and press "OK" to enter the menu.


- Select the "Settings" application

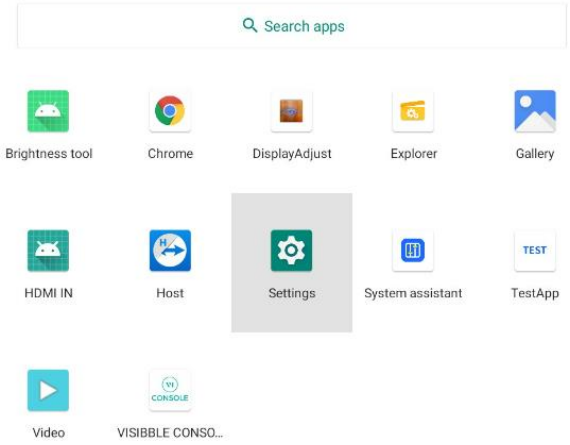


Click on "System"

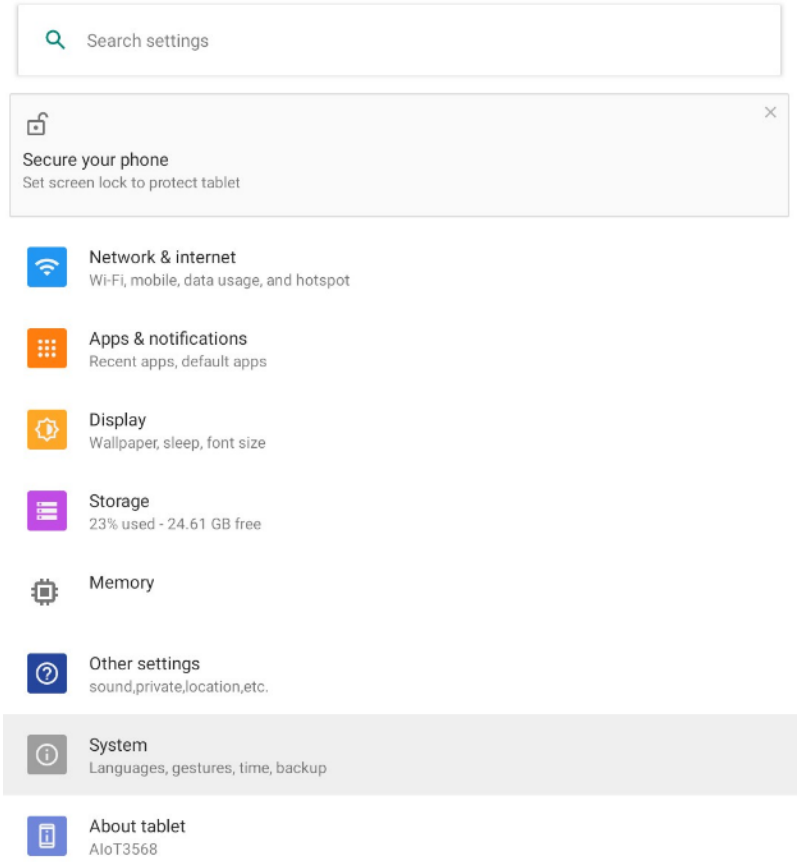

Then click on "Language & Input":

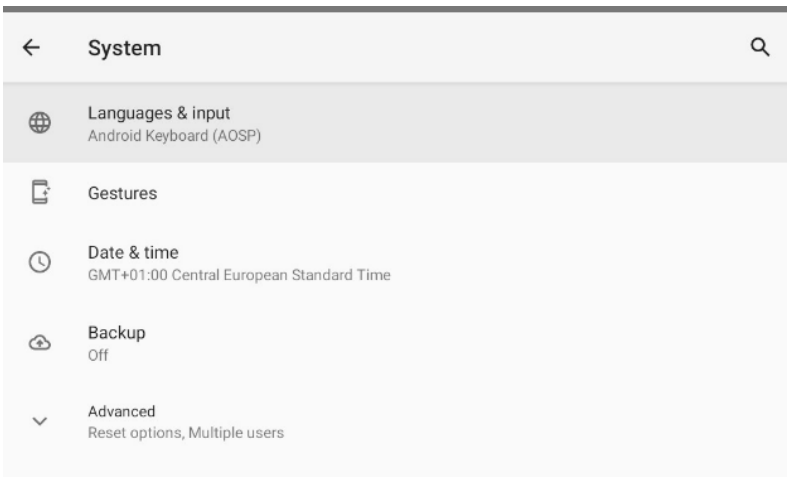

Then click on "languages".

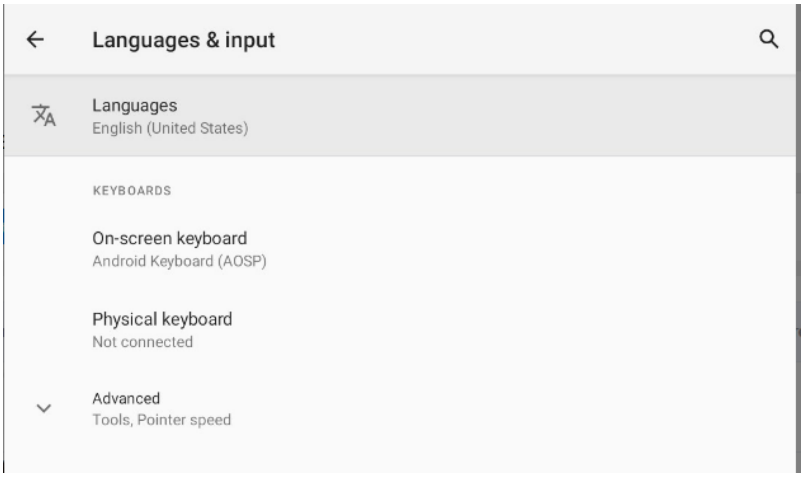

If the language you are looking for is not there, click on "Add a language":



Search for the language you wish to add and add it :




Then select language 1 :




The screen language has now been changed.

2 Check the firmware version (if you need to update, you need to be on a version higher than that of 29/12/2023)


To find out the firmware version applied to the screen, go directly to System Assistant at the top of the page (the date is underlined in red) :

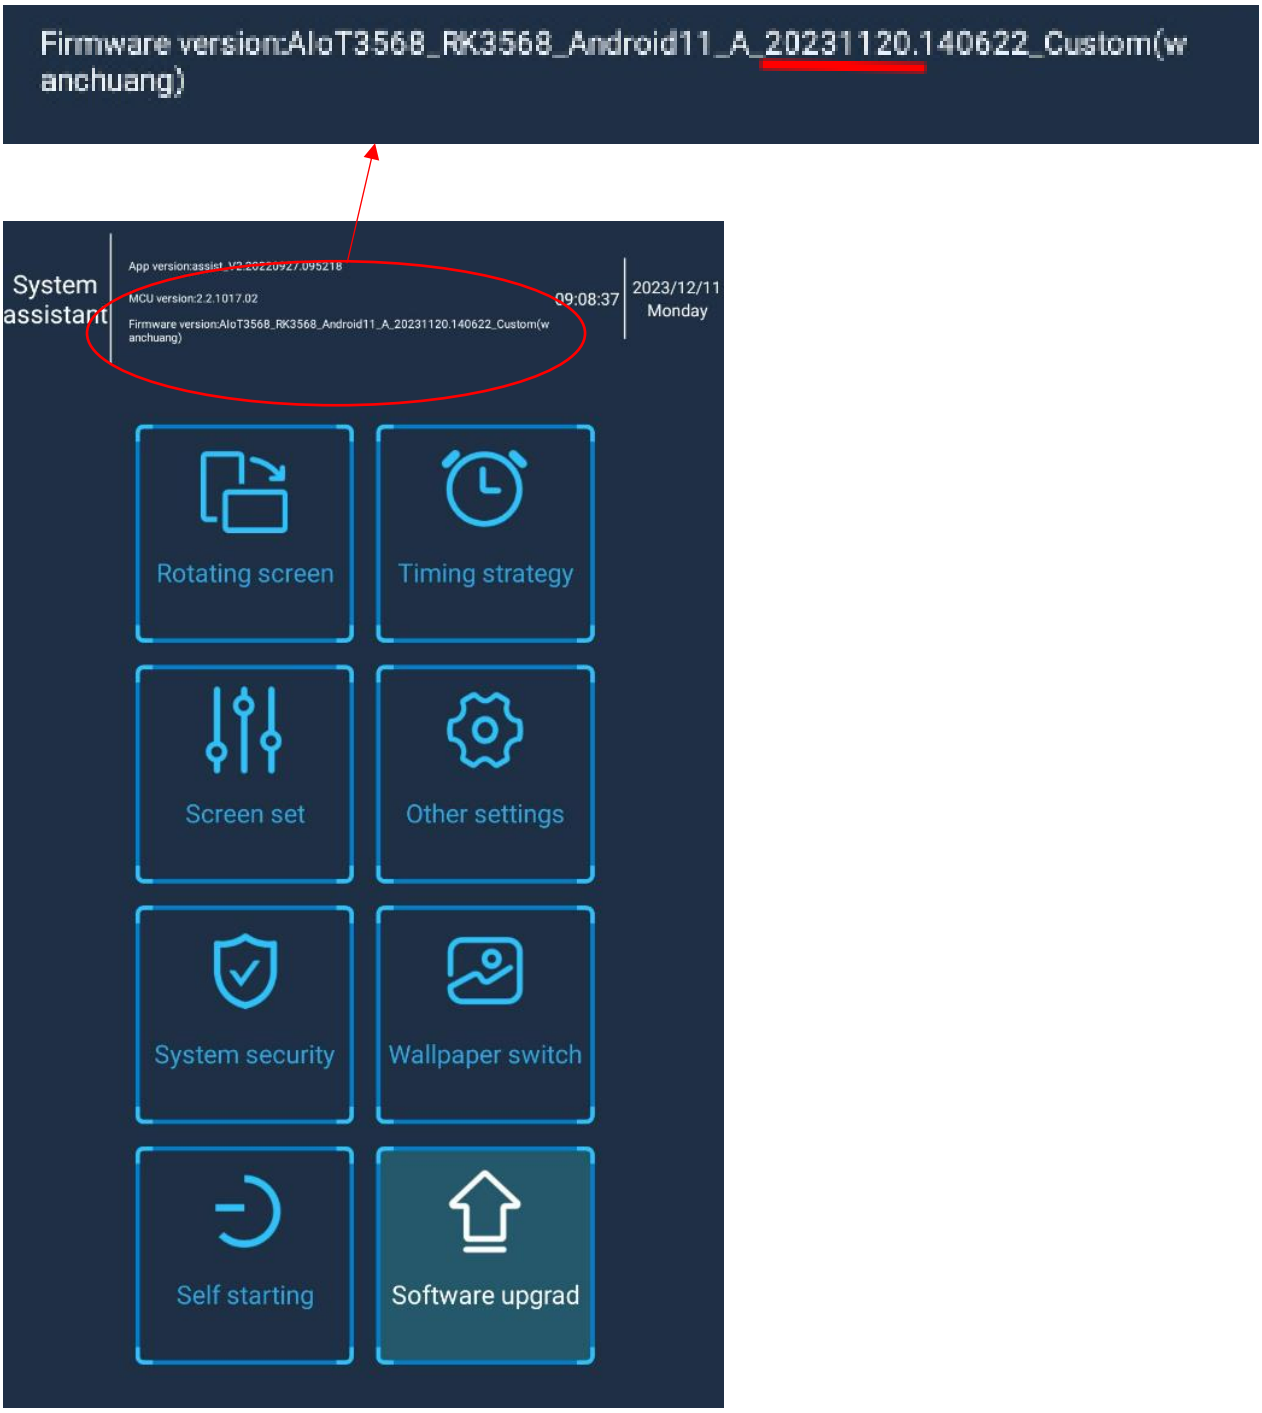

First you need to prepare the USB key, format it in FAT32 format and add the latest FirmWare to it (compressed file).

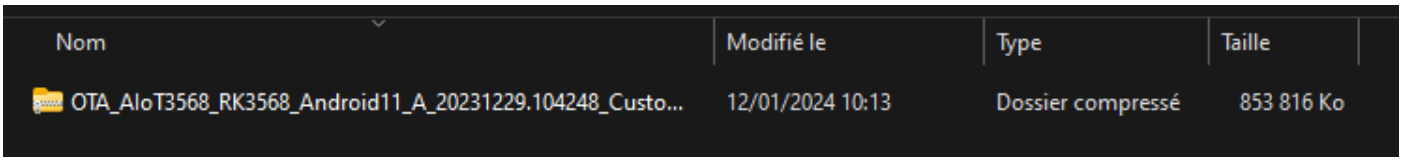


You then need to rename this compressed folder "update" on the USB stick:

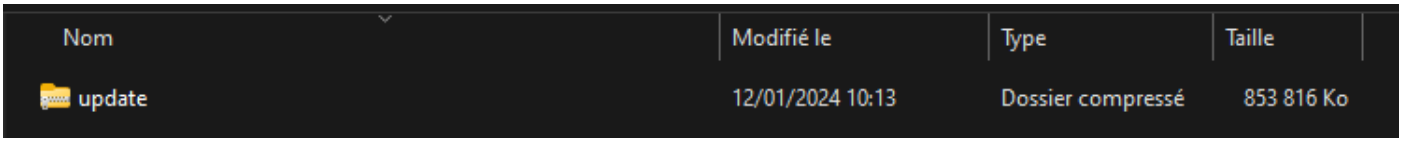


Connect the USB key to the screen with the "update" folder at the root.

Once this has been done, the USB key will normally be detected automatically and the screen will offer to download the latest firmware :

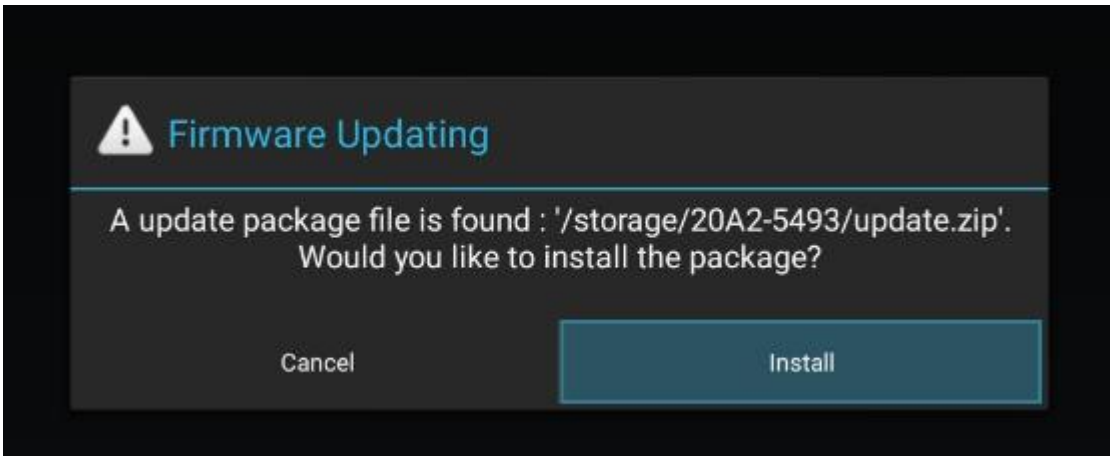

Click on "install", and this message appears:

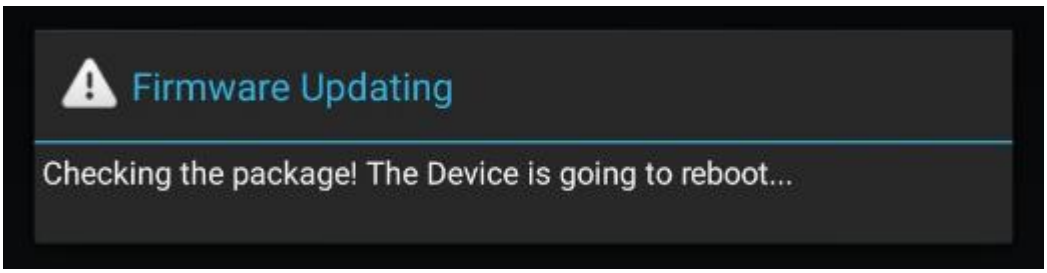


An installation message and a loading bar appear until the screen is restarted.


If the folder on the USB stick is not automatically detected :



Using the remote control, press "return" to mute the broadcast, then press "OK" to enter the menu.

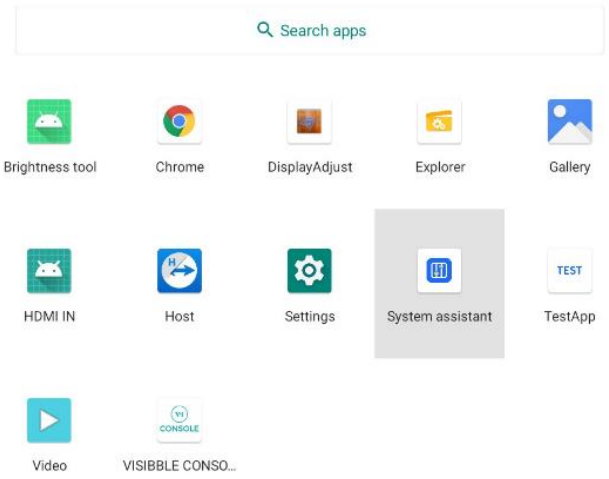

Then "Software update".

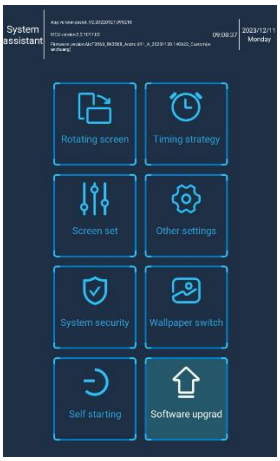


3 Connect the screen to the Wi-Fi network :

GENERAL INFORMATION
The display runs on Android and can be connected to a Wi-Fi network if it cannot be connected via Ethernet and a Wi-Fi network is available in the branch.


This is not recommended as it is less stable than the wired connection, but it can be used in an emergency or if there is a problem with the Ethernet connection.

Using the remote control, press the "back" arrow to mute the broadcast and press "OK" to enter the menu.


- Select the "Settings" application

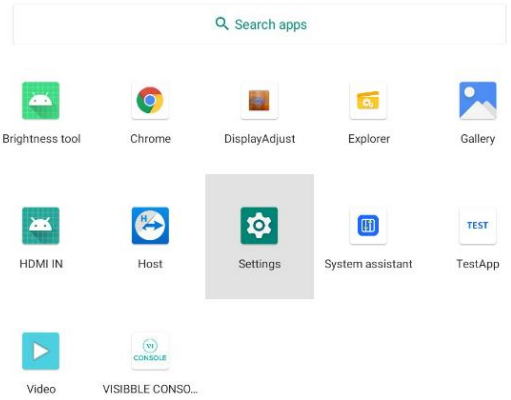


Select "Network & Internet”

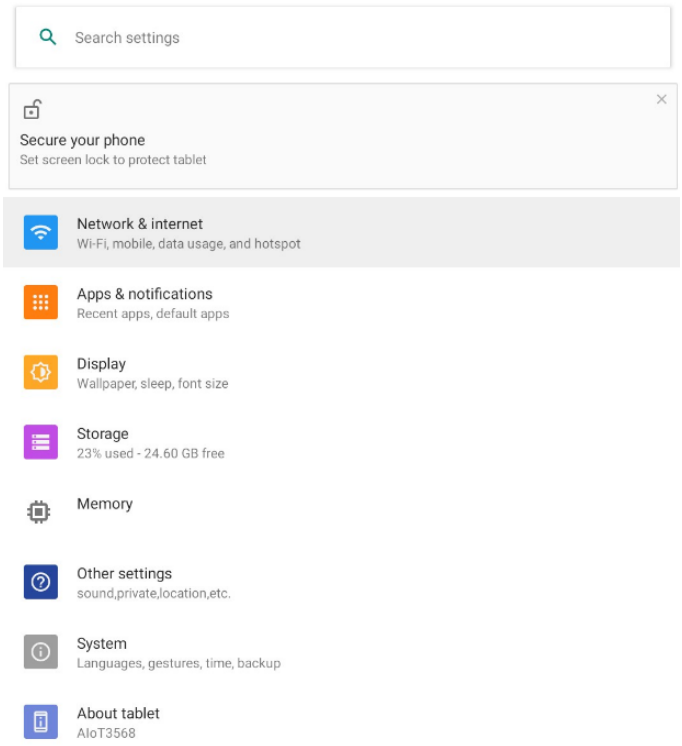


Click on Wi-fi :

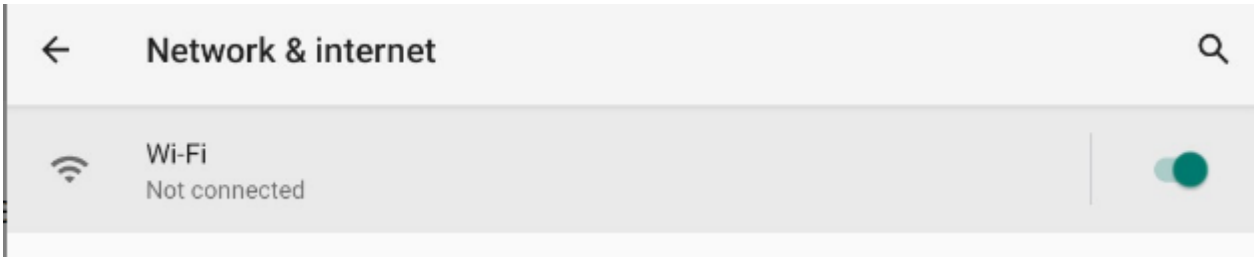

Search for the branch's Wi-fi network and connect it

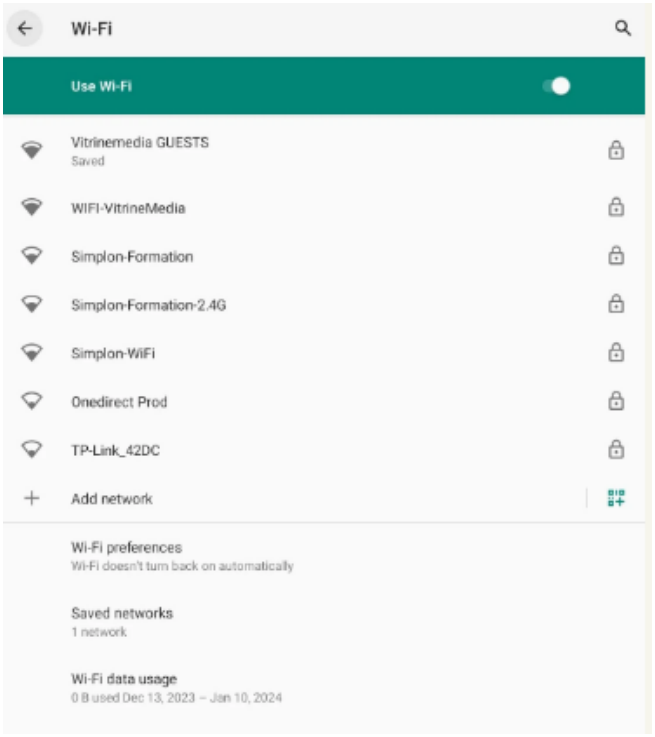

Select the network in question, then enter the password (a keyboard will open) :

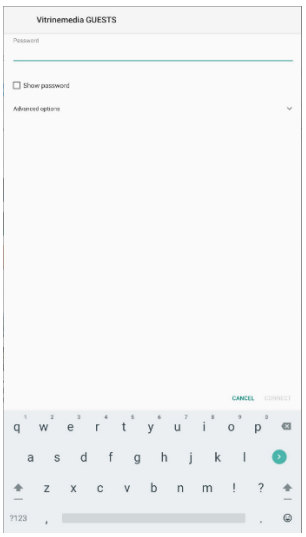


Then press the green arrow to the right to confirm:

- Press "OK" on the remote control.

If the screen is connected via Ethernet, the Wi-fi may still appear "disconnected", but if Ethernet is disconnected, the screen will appear connected.




Other options are available if you select the Wi-Fi network

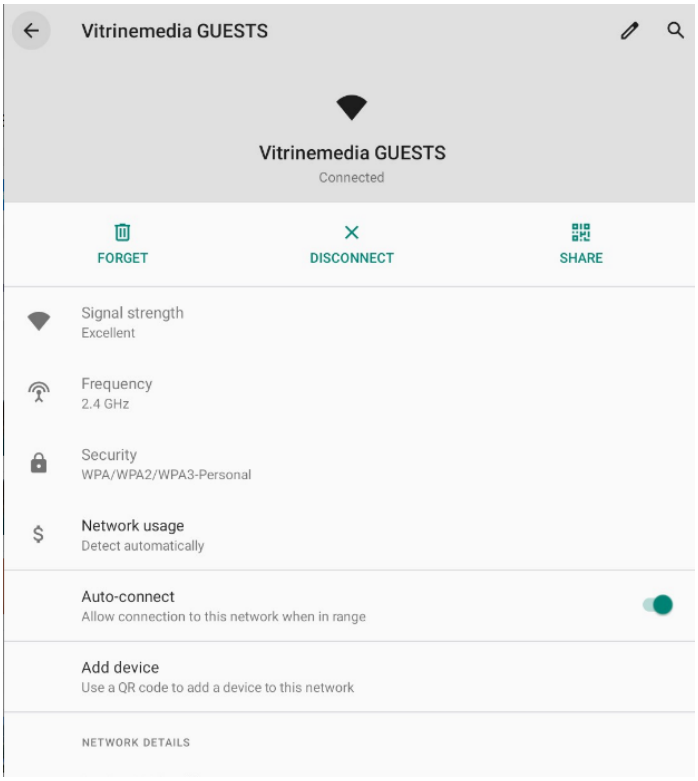


To enable Wi-fi automatically :


- Select "Wi-fi preferences".

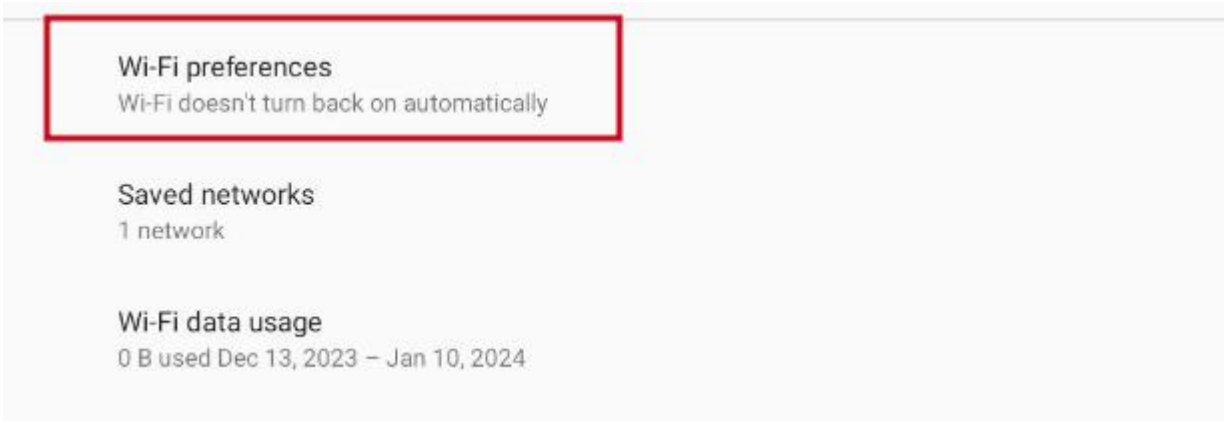


Then activate "Turn on Wi-fi automatically".

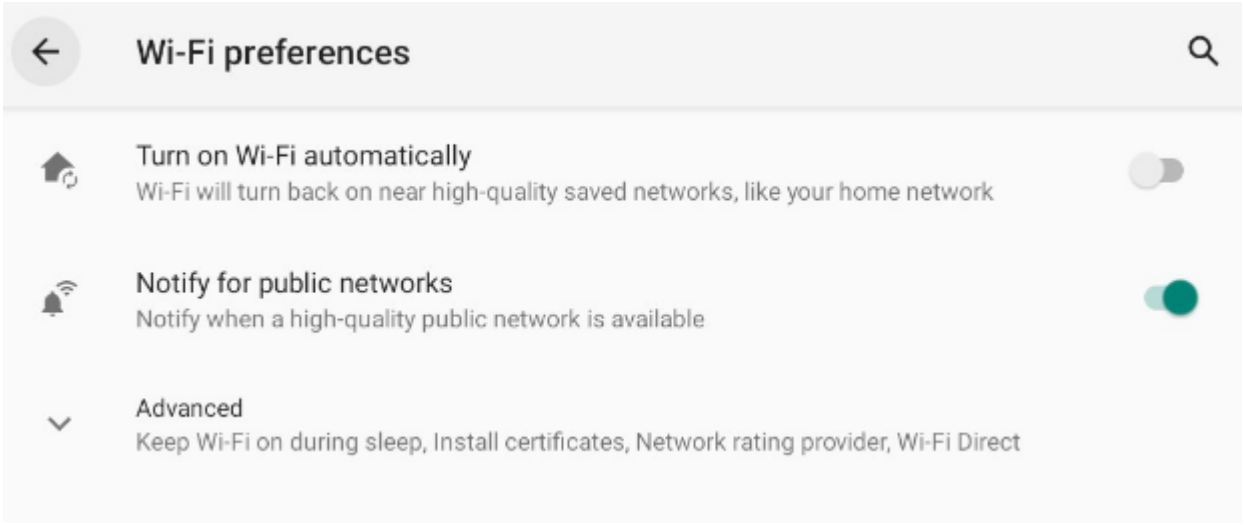

Confirm

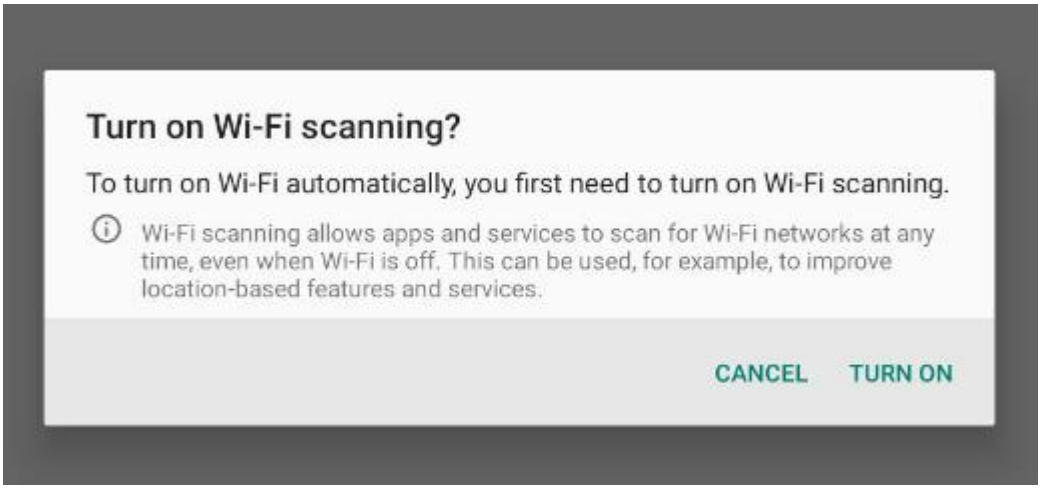

The function is then activated :

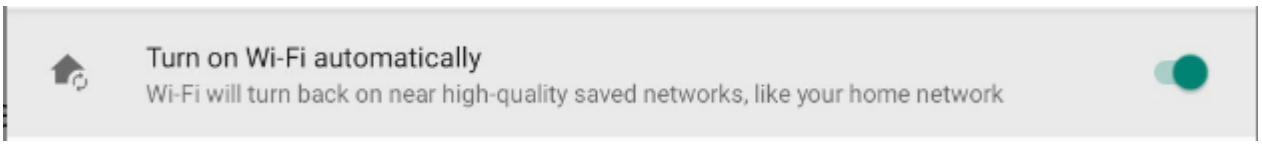


4 Setting the date and time

Setting the screen time zone


Normally, the default time zone is GMT+1 Central European Standard Time, i.e. adapted to France.

If necessary, you can change it if the screen is not in the correct zone:
Press "back" on the remote (the arrow) to switch off the broadcast and then "OK" to open the menu.


Go to "settings".

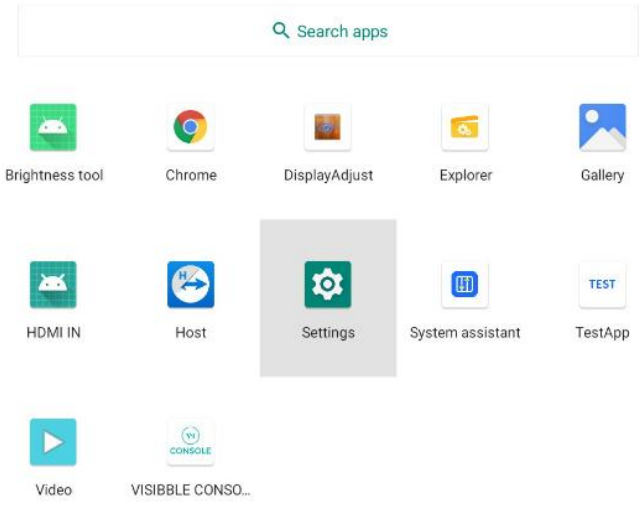


Go to "System".

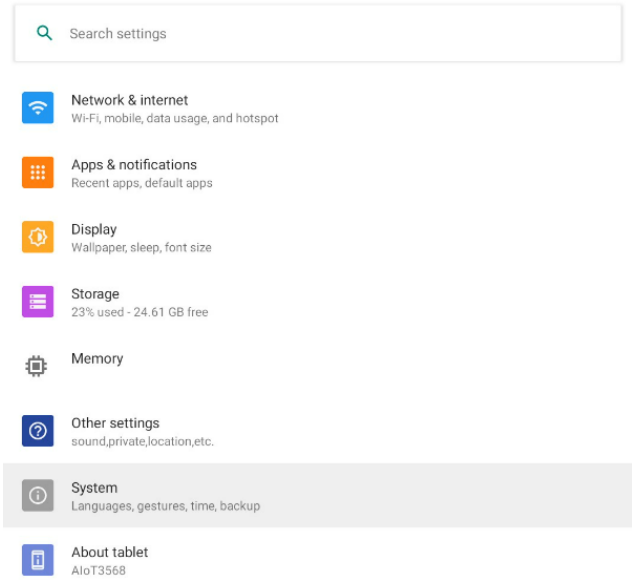

Then in "Date & Time

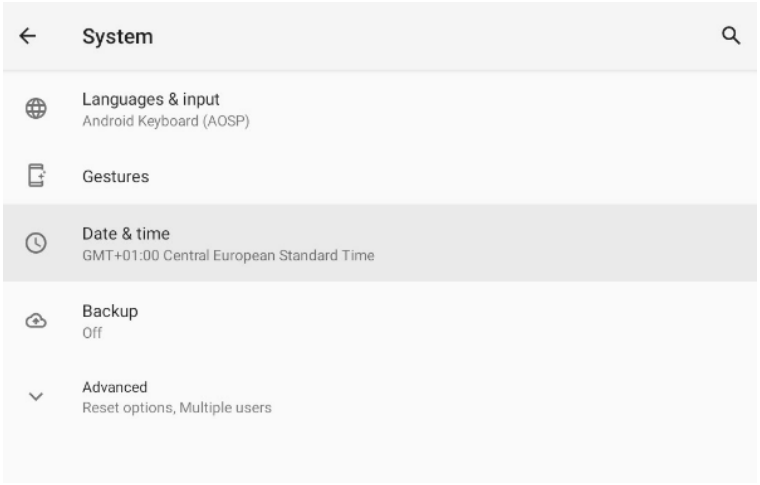

Next, check that the time zone you have entered is the correct one.

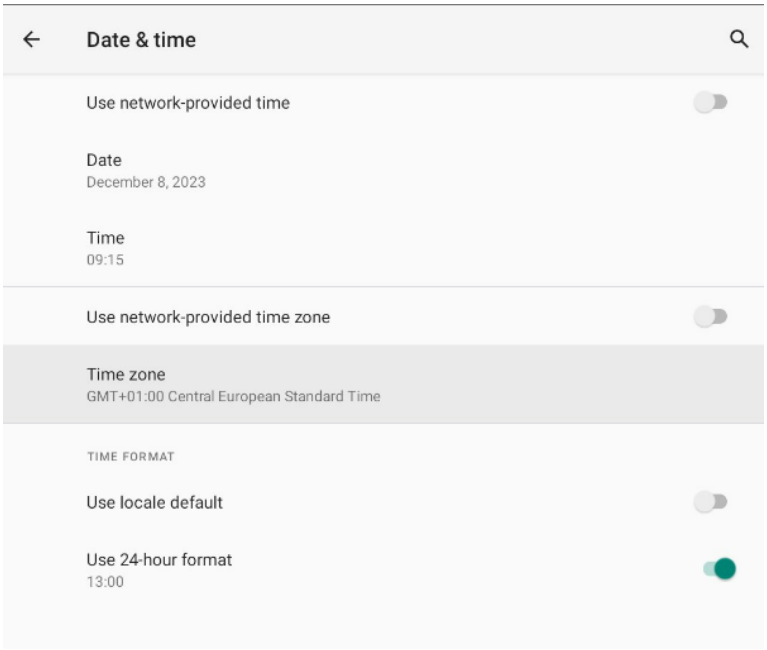


Here you can also set the screen date and time.

If the setting from the network doesn't work properly, don't hesitate to set them manually.


5 Check whether the Brightness menu is activated :

Using the remote control, press "Back" to mute the broadcast and "OK" to enter the menu.

Click on "Brightness tool"

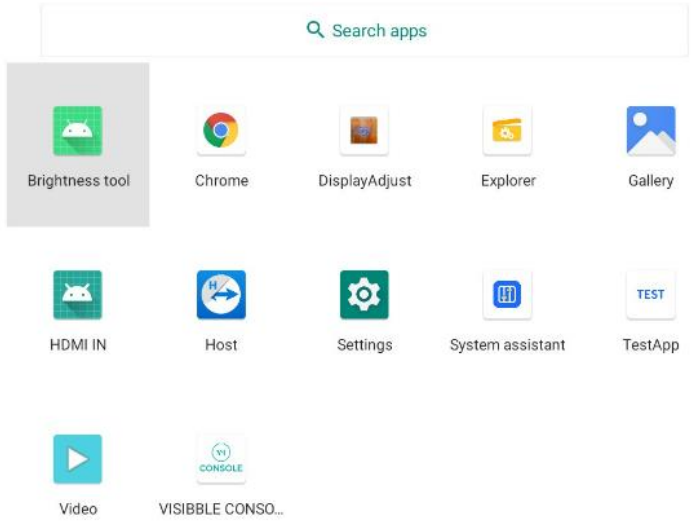

Select "Adaptive Brightness" ON

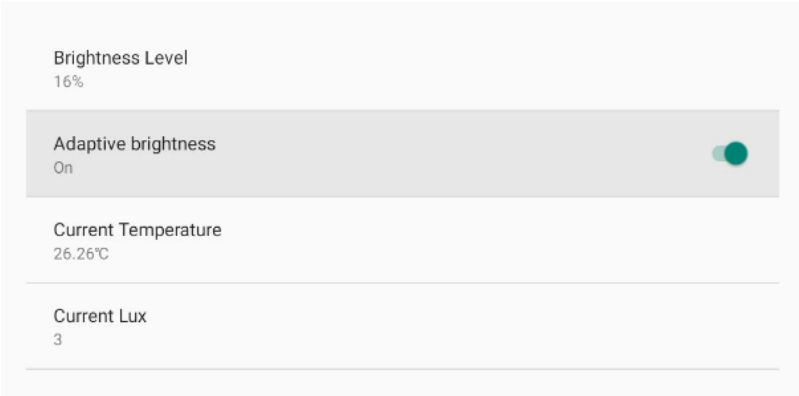

This menu also gives you access to the screen temperature (if it overheats, brightness is automatically lowered).


Additional information:

- Current Lux = brightness detected by the sensor (environment brightness)


6 Changing the screen orientation :

Using the remote control, press "Back" (the arrow) then OK to enter the menu.

Select the "System Assistant" application

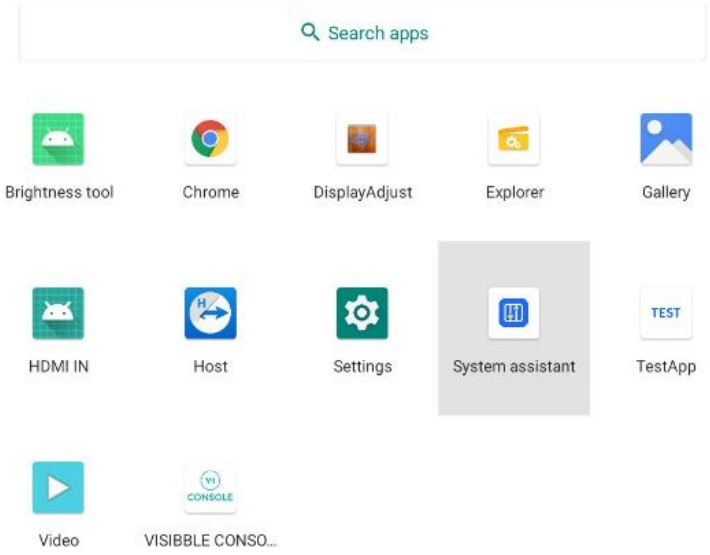

Select "Rotating Screen

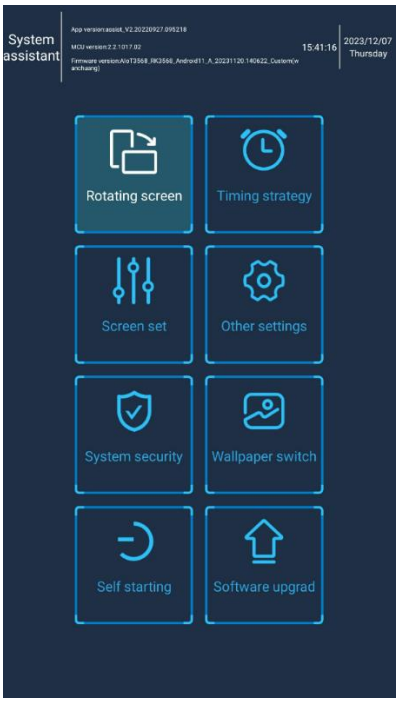

You can then select the angle of rotation
For installation with the screen facing the right way :
0° = LANDSCAPE
90° = PORTRAIT
270° = REVERSE PORTRAIT
180° = REVERSE LANDSCAPE



Customer Service : hello@vitrinemedia.com

www.vitrinemedia.com